

NA - A7CII

For Sony A7CII /R Camera

PN 17436

User Manual
Housing
FF- MIL

Introduction	2
Package Contents	2
Important Instructions	3
Part Names and Functions	4
Housing Mount	7
Opening the housing	8
Closing the housing	9
Preparation for Use	10
Optional Accessories	16
Care/Storage	17
Warranty	18
Specifications	19


INTRODUCTION

Thank you for purchasing this Nauticam product.


Before using the product, please read this manual thoroughly to familiarize yourself with full scope of functions on the product as well as ensuring that you will use the product correctly.

PACKAGE CONTENTS


Make sure that you have all the included items listed below before using this product. If some items are missing or damaged, contact your local Nauticam dealer.

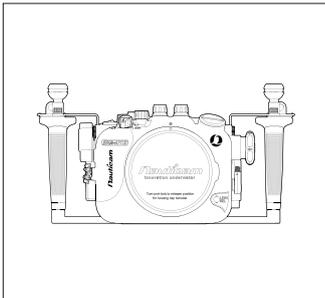

NA-A7CII
(2x Plugs for Optical Fiber Cable Mount, 1 x Housing Cap, 2x Handles with Mounting Balls, 2x Handle Brackets)

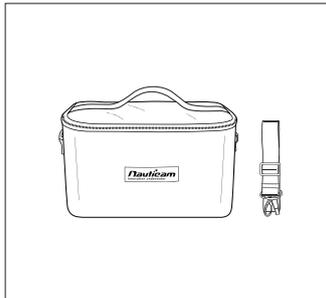


Padded Travel Case
#36333

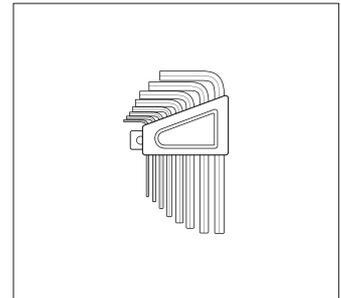


Allen key set



Lubricant

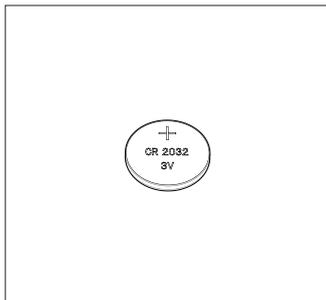


Panasonic CR2032 Battery
(Pre-installed for Moisture Alarm)

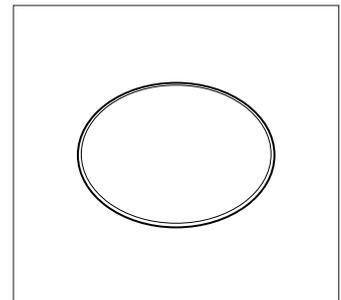


Spare Main O-ring
#90139

After purchase, we suggest that you reuse all packaging materials for future travelling.

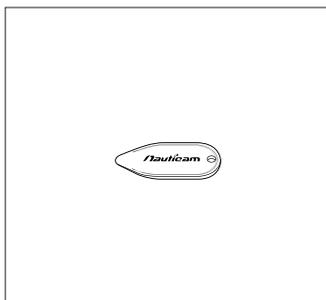

O-ring Remover

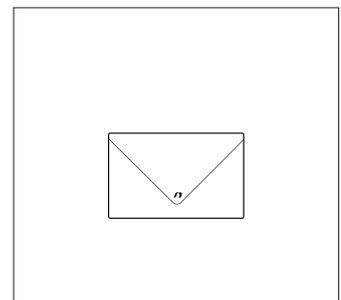

Manual Instruction Card

IMPORTANT INSTRUCTIONS

1

Water-tight test of the housing (without camera inside) before usage is recommended as well as any O-ring renewal and port change.

2

Do not seal the housing when travelling by air as this may lead to a pressure difference between the atmosphere and inside the housing.

3

Only the accessories specified by Nauticam must be used. Third-party accessories may result in malfunctions or damage to the product.

4

Use only Nauticam lubricant on silicone rubber O-ring.

5

Do not stretch any O-rings excessively. Only remove it using Nauticam O-ring remover.



6

Discontinue use immediately when there is a sign of leakage.

7

Do not attempt to remove parts of the housing yourself. Repairs must be done at authorized service centers only.

8

The housing should be positioned on the a stable and safe surface on land.

9

Do not expose the housing in direct sunlight for a prolonged period.

10

Do not open the housing in wet or sandy environment. Protect the housing from moisture and debris in order to prevent malfunction or leakage.

11

Prevent any sand or dust or water penetration inside the housing. Be extra careful when changing lens and inserting or removing the camera.




12

This product is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised and/or given instruction by a responsible person concerning use of the product to ensure that they can use it safely.

PART NAMES AND FUNCTIONS


Rear View

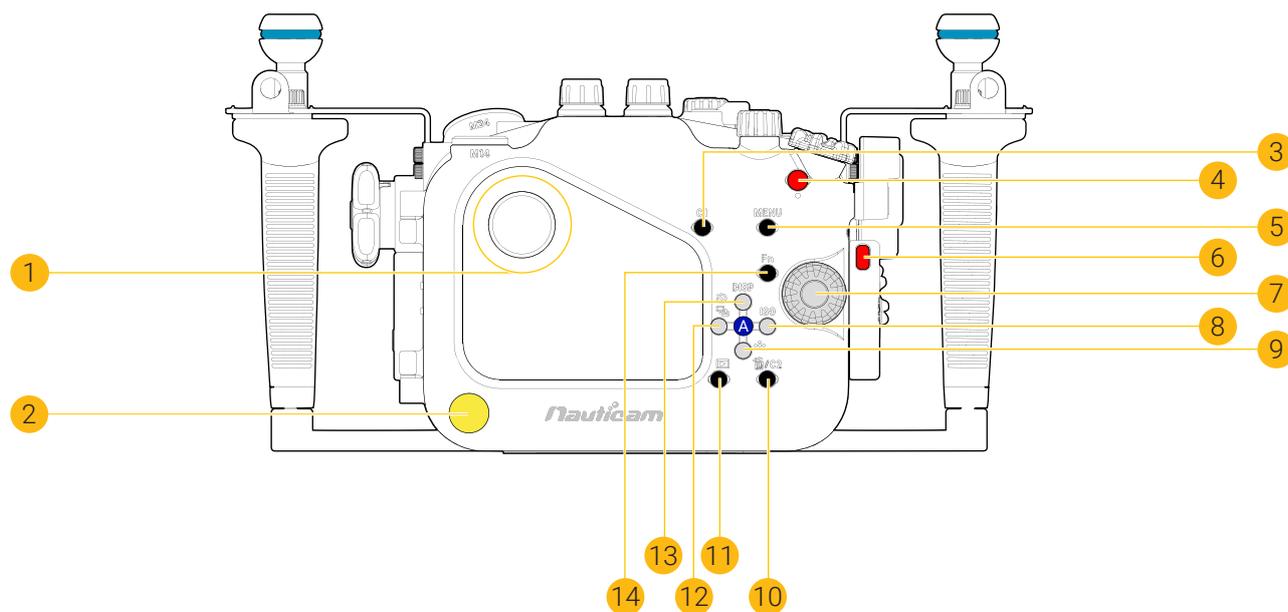

- | | | | |
|----|----------------------|----|------------------------------|
| 1 | Viewfinder | 2 | Moisture alarm window |
| 3 | C1 button | 4 | REC button |
| 5 | Menu button | 6 | Housing unlock button |
| 7 | Quick control dial 1 | 8 | ISO button |
| 9 | Image index button | 10 | Delete/C2 button |
| 11 | Playback button | 12 | Self-timer/Drive mode button |
| 13 | Display button | 14 | Fn button |
| A | Menu/Set button | | |

PART NAMES AND FUNCTIONS




Top + Front Views

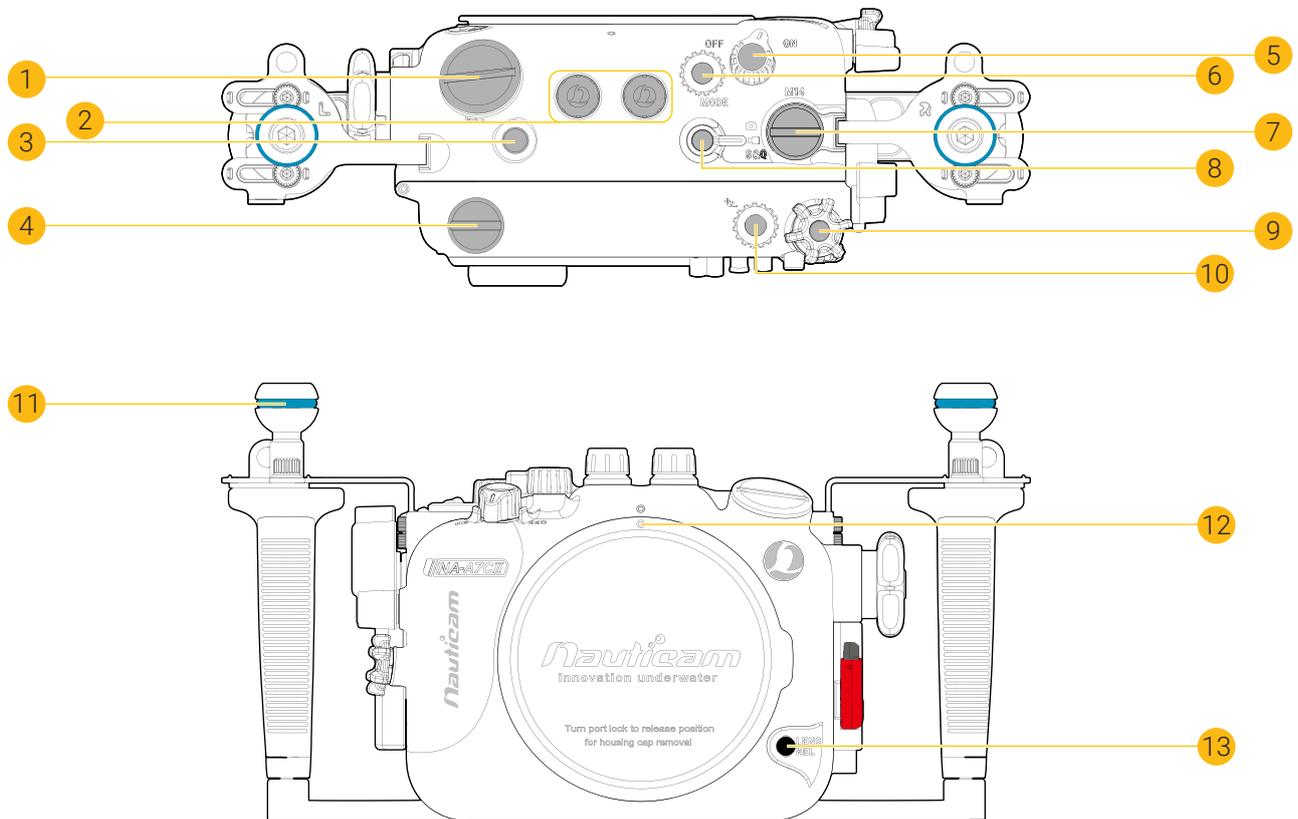

- | | | | |
|----|-------------------------|----|--------------------------------|
| 1 | M24 Accessory port | 2 | Optical fiber cable connection |
| 3 | M10 Accessory port | 4 | M14 Accessory port |
| 5 | Main switch | 6 | Mode dial |
| 7 | M14 Accessory port | 8 | Still/Movie/S&Q lever |
| 9 | Rear dial | 10 | Exposure compensation dial |
| 11 | Accessory mounting ball | 12 | Port index mark |
| 13 | Lens release button | | |

PART NAMES AND FUNCTIONS

Back + Side Views

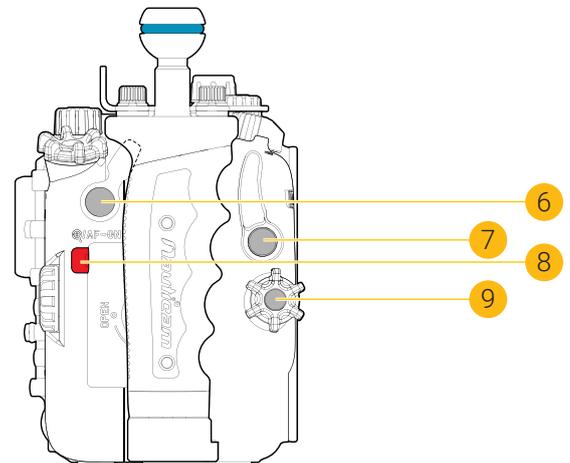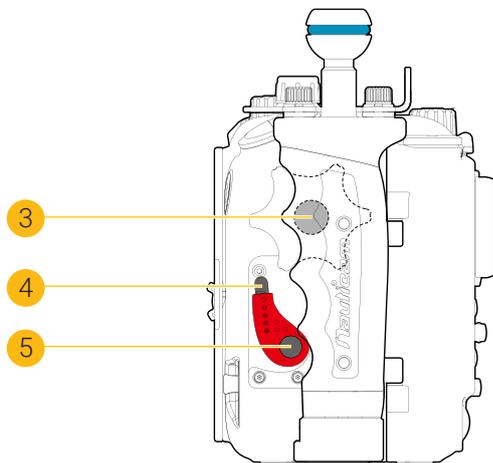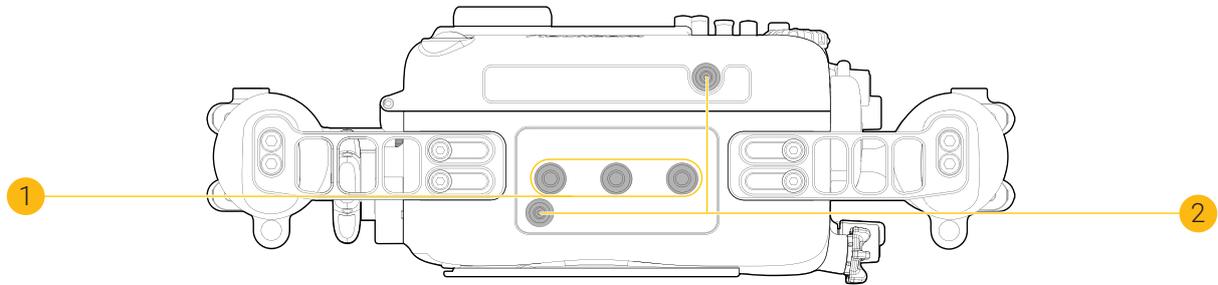

1 1/4" Threaded tripod holes

3 Zoom/Focus knob release

5 Port lock lever

7 Shutter release lever

9 Front dial


2 Sacrificial zinc anodes

4 Port lock safety button

6 AF-ON/Enlarge lever

8 Housing unlock button

HOUSING MOUNT

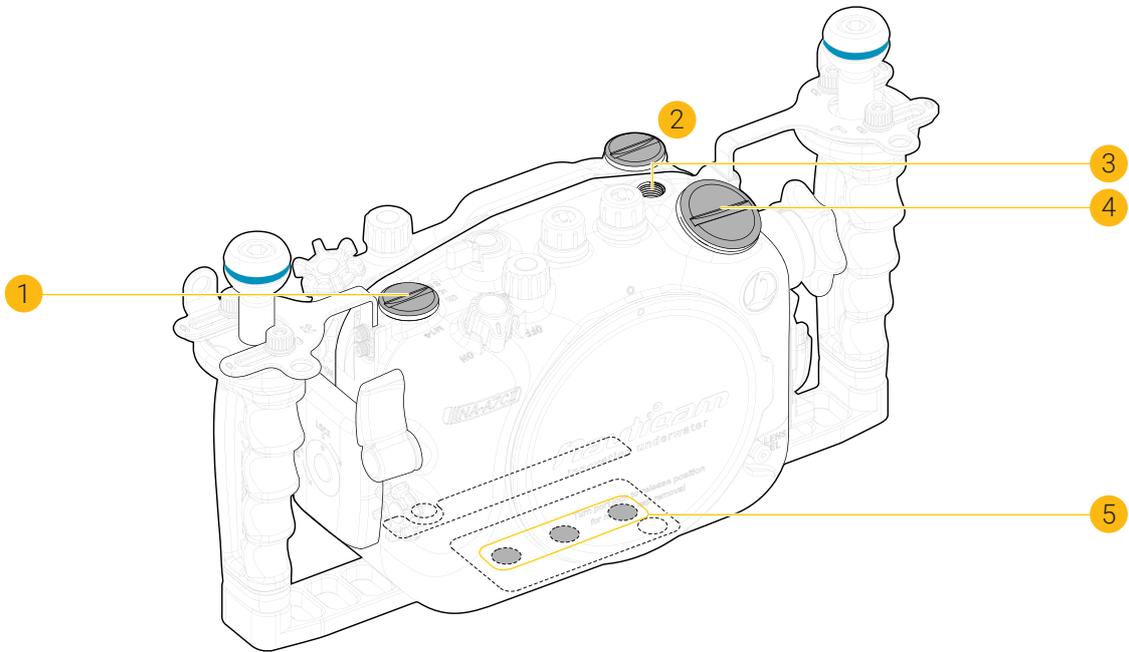

Housing mount


Compatible accessories

1	M14 Accessory port	25056	M14 Nikonos 5-pin Bulkhead	
2	M14 Accessory port	25624	M14 Vacuum Valve II	
3	M10 Accessory port	25221	M10 Strobe Mounting Ball	
4	M24 Accessory port	25033	Standard HDMI Bulkhead with M16 Thread	} HDMI 1.4
		26326	M24-M16 Adaptor for use with 26325	
		25046	HDMI (D-D) Cable in 200mm Length	
5	1/4" -20 Mounting threads	17954	Universal Tripod Plate	
		17960	Universal Quadra-pod Plate	

OPENING THE HOUSING


* drawings as illustrations only

1

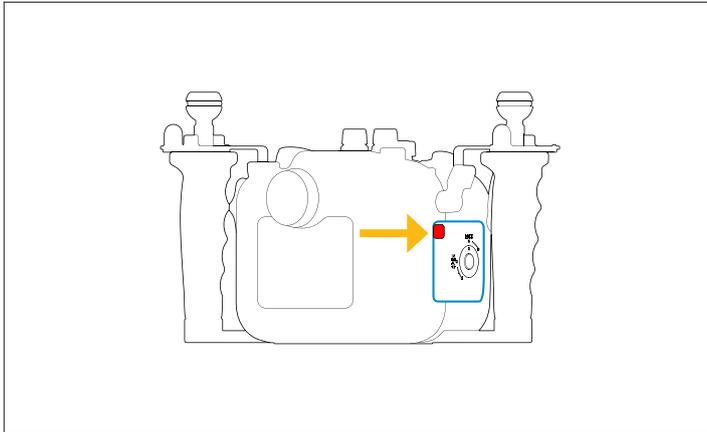


depress housing unlock button

2

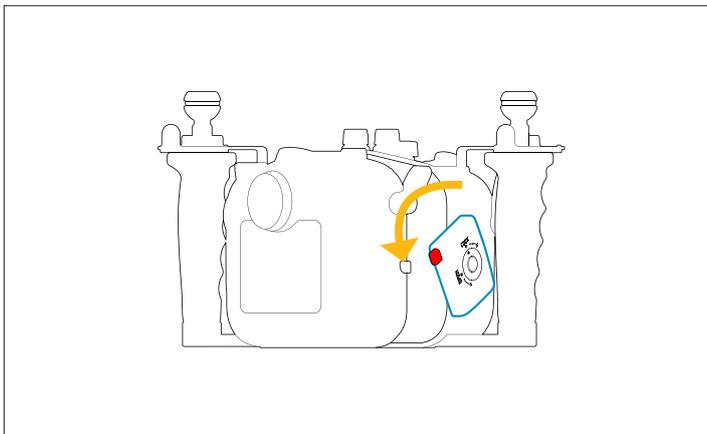

turn housing lock latch
anti-clockwise to open the
housing

3

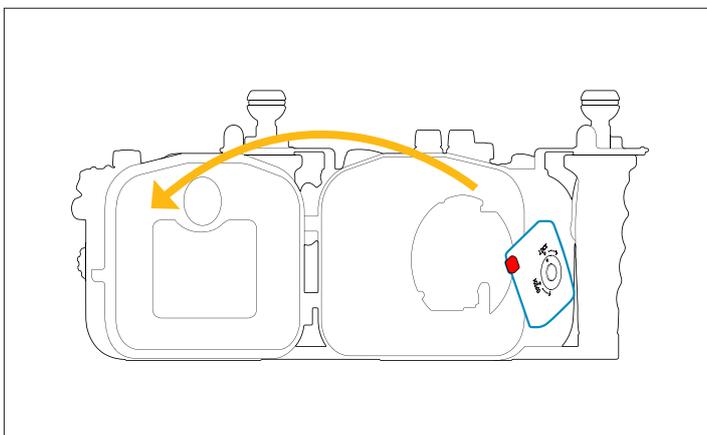


flip open the back housing
when lock latch is aligned to
'open' position

CLOSING THE HOUSING

* drawings as illustrations only


1

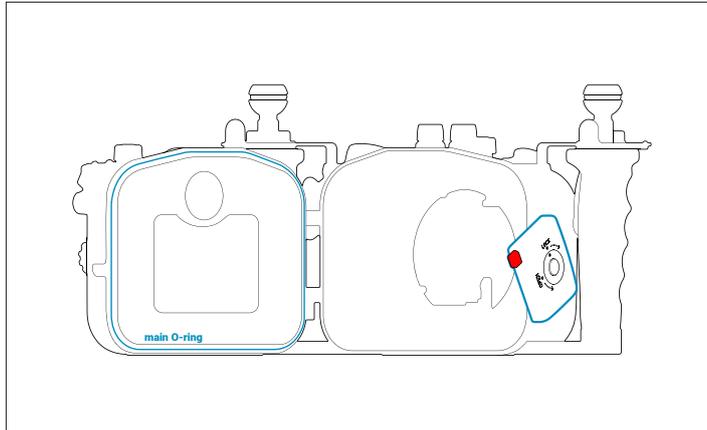

before closing the housing, clean and lubricate the main O-ring


make sure nothing is caught between front and back housing and that they are fully aligned before locking

2

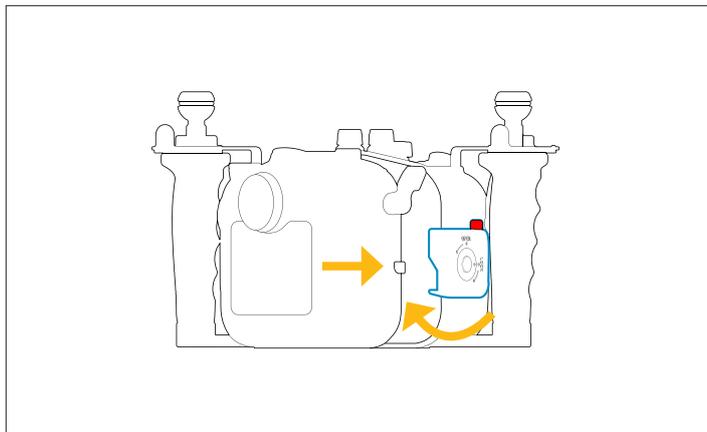

insert the housing shaft into the shaft hole and then rotate the lock latch clockwise until you hear and feel it click into place

3

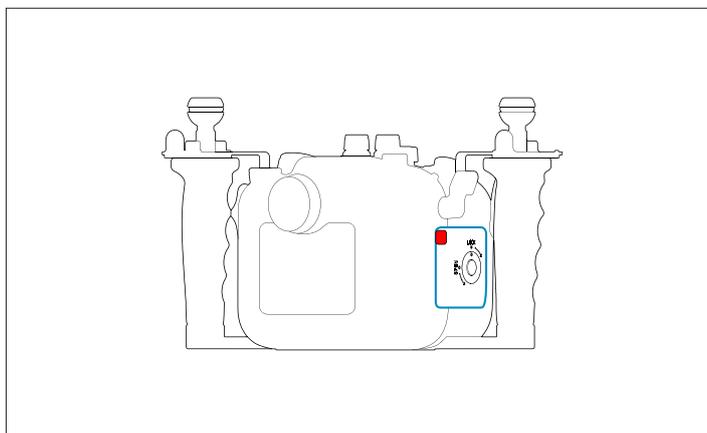


housing locked in place securely

PREPARATION FOR USE

* drawings as illustrations only


Installing the Camera - housing tray attachment

1

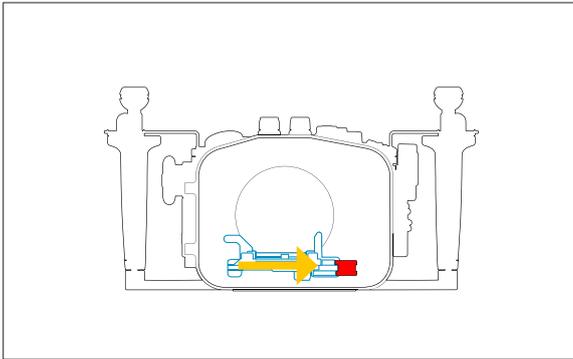

unlock camera tray lever and remove the tray from the housing


2

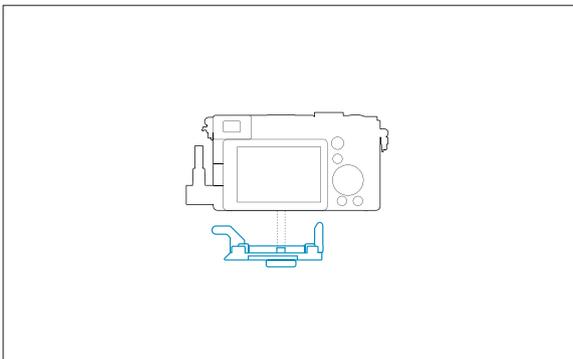

attach the camera tray by tightening the tray screw into the tripod socket of the camera

place the actuator on the camera tray in place and make sure it is engaged with the camera


3

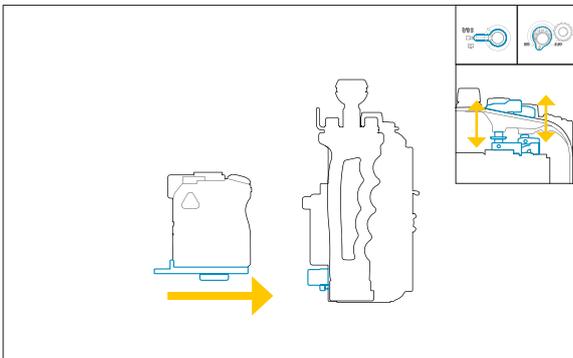

** lift up the Still/Movie/S&Q lever as well as the ON/OFF lever before installing the camera into housing*

slide the camera tray back into the housing along the tray rail

4

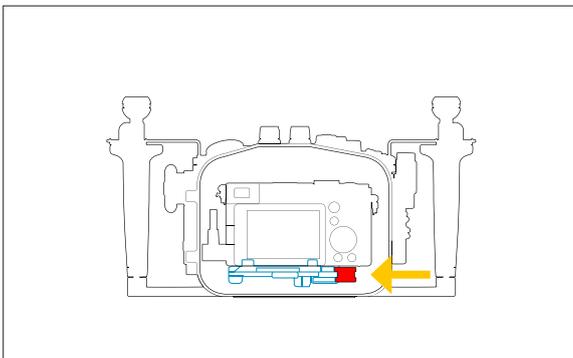


lock camera tray

**gently push the Still/Movie/S&Q lever and ON/OFF lever downwards to make sure it is engaged with the lever on the camera*


PREPARATION FOR USE

* drawings as illustrations only


Installing the USB-C Bulkhead

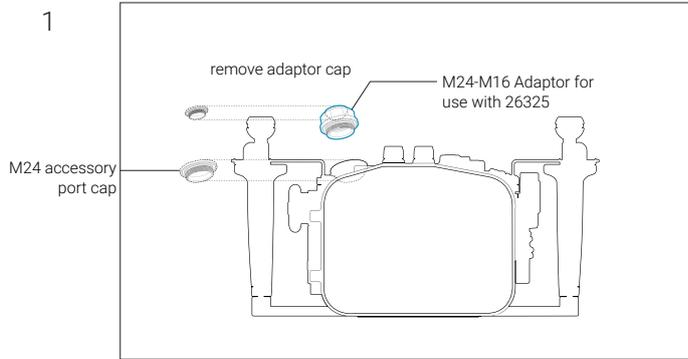


unscrew the M24 accessory port cap from the camera housing and screw the M24-M16 adaptor into the housing port

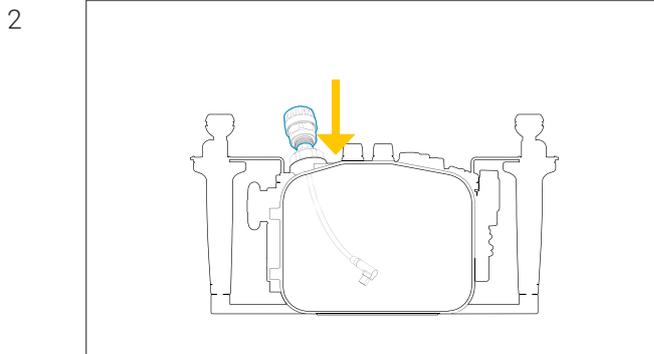

plug the USB-C Bulkhead into the accessory port, gently push the connection head into the accessory port until it cannot go further then tighten it by turning the locking nut.

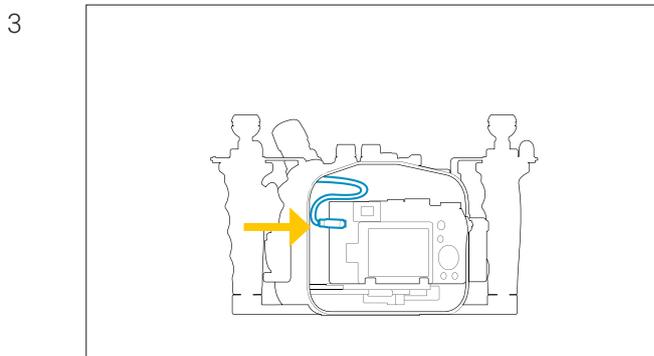

plug the cable into the USB Type-C jack on the camera with camera tray attached before sliding into the camera housing

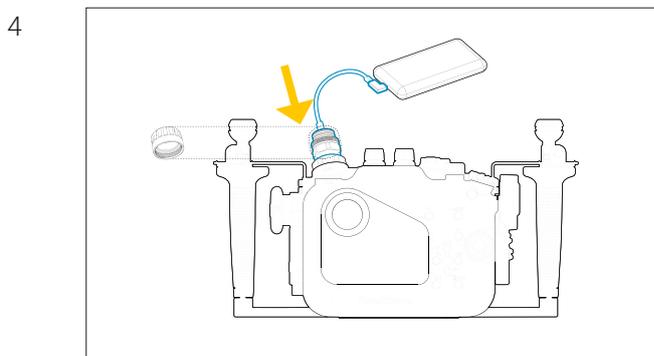

slide the camera tray into the housing along the tray rail then lock camera tray


plug the USB Type-C into the USB-C Bulkhead

PREPARATION FOR USE

* drawings as illustrations only


Port Mounting

1

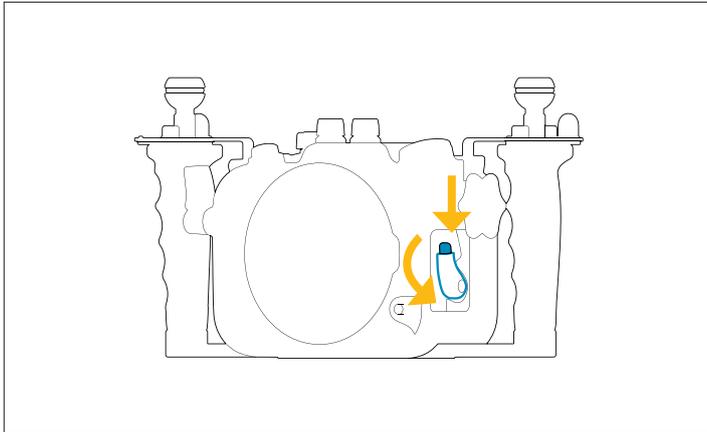

depress port lock safety button
and rotate anti-clockwise

2

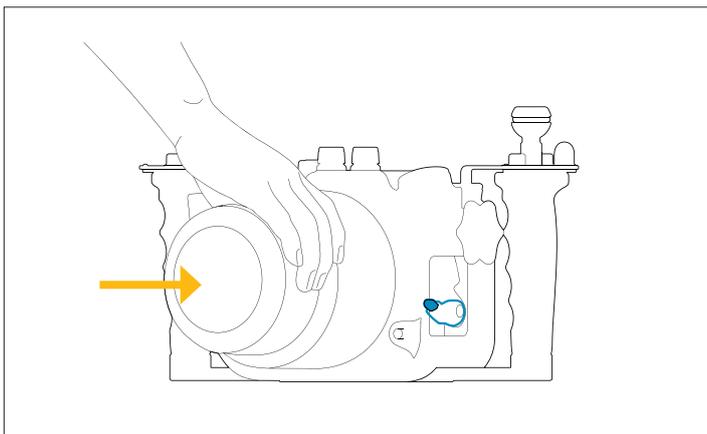


lubricant the port O-ring before
mounting

align index mark

push port assembly straight in

3

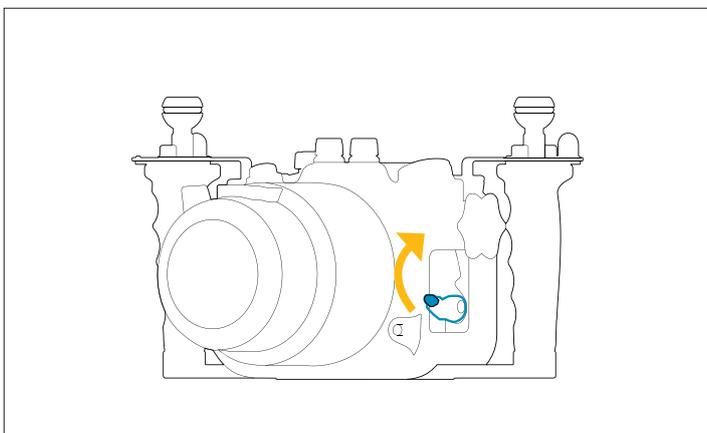


rotate locking lever clockwise to
lock

PREPARATION FOR USE

* drawings as illustrations only

Coating housing O-ring

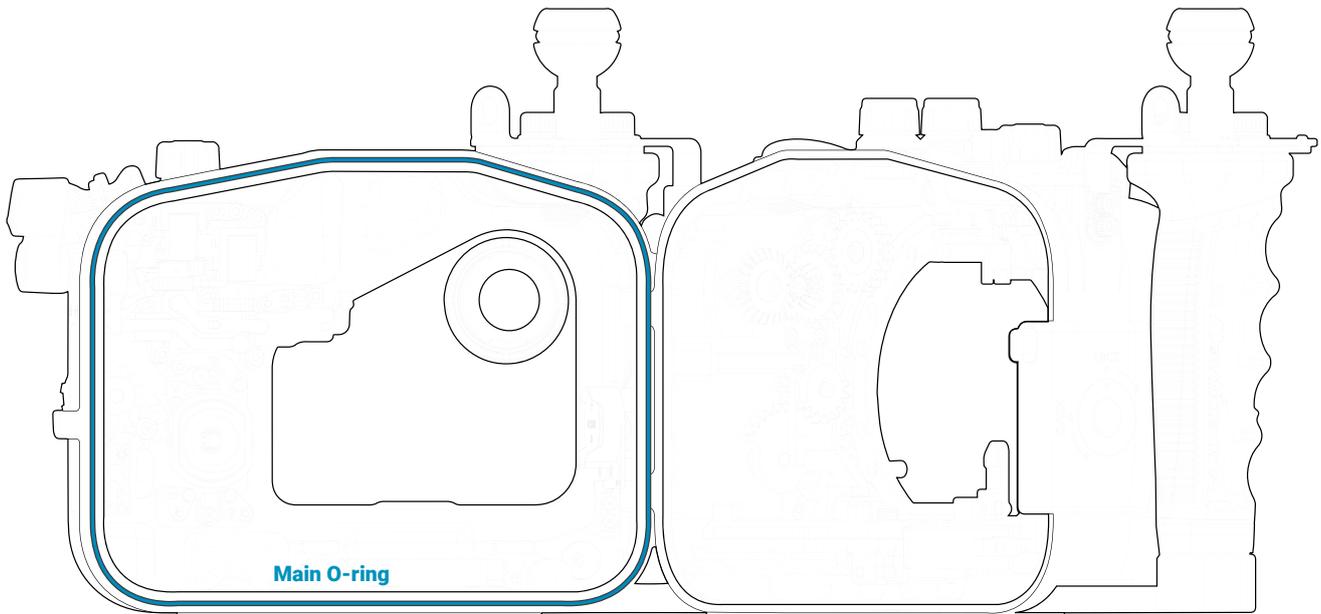

- 1
remove the main O-ring using an O-ring remover

- 2
clean the O-ring groove with a cloth and ensure that it is free from salt or other foreign materials


- 3
lightly coat it with provided lubricant

- 4
return the main O-ring by slowly pressing from one corner to the whole perimeter


PREPARATION FOR USE

* drawings as illustrations only

Setting up moisture alarm

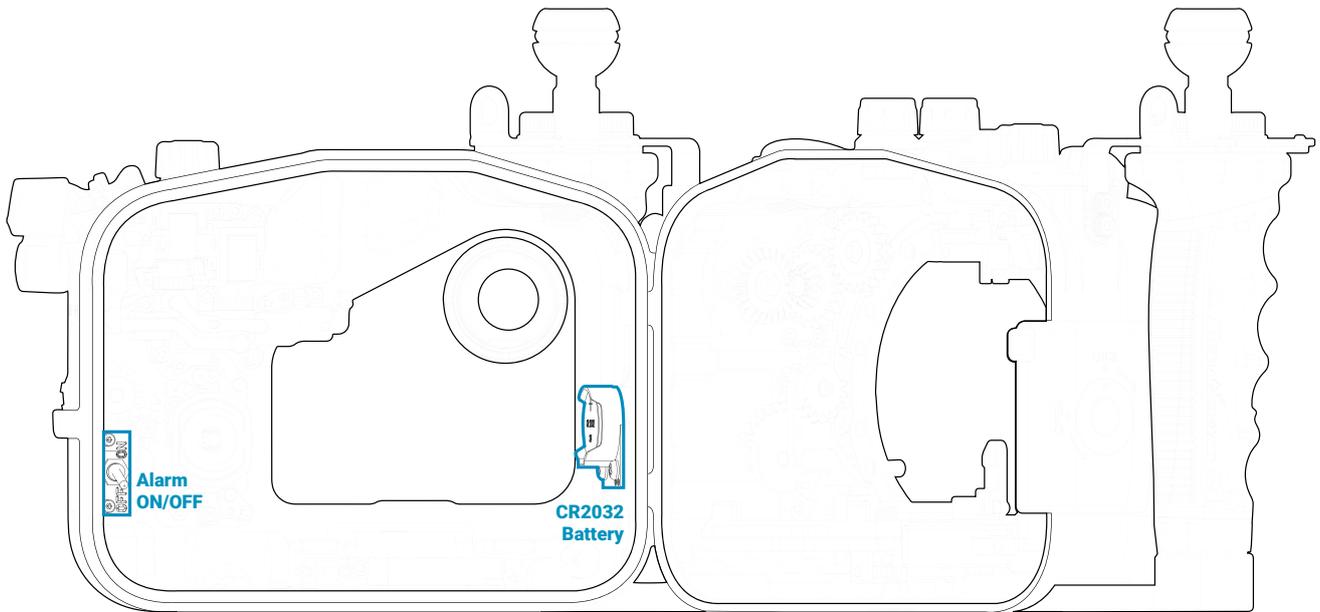


1

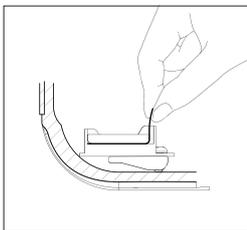


remove battery insulation film

2

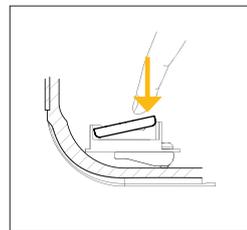


press the battery down until it click into place

3

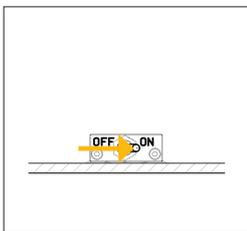

switch on the alarm
- the moisture alarm window will flash in **BLUE** when it is working correctly

4

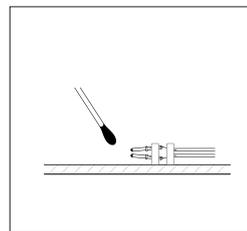

test the alarm
- connect the wires with a dampened cotton bud; the alarm will give a repeating 'beep' and the moisture alarm window will flash **RED**


* please contact our authorized service centers if testing fails
* please refer to page 16 for complete vacuum system guidance

PREPARATION FOR USE

* drawings as illustrations only

Changing lens/port without opening the housing

1

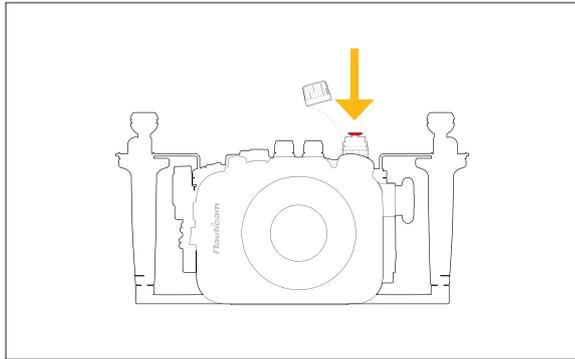


If using with vacuum valve :

remove the cap from the vacuum valve and press the red button to release pressure before unlocking port lock


If using without vacuum valve, please follow from step 2

2

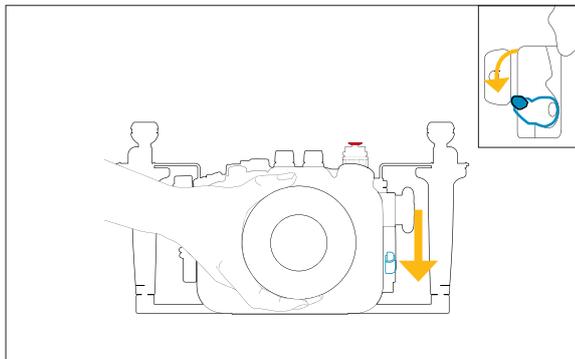


unlock port lock and remove port assembly

3

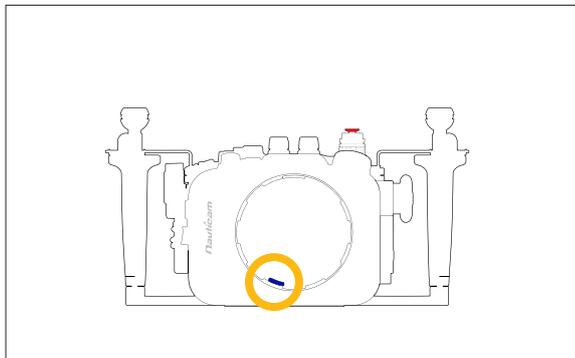

press the blue button to reset vacuum alarm before replacing port

4

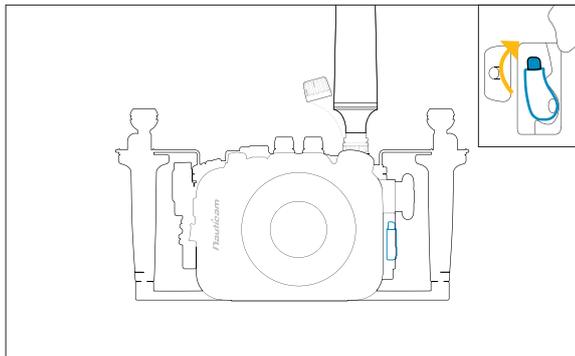

replace port assembly

then reset vacuum valve system using hand pump and close the cap after


* please refer to page 16 on complete vacuum system guidance

OPTIONAL ACCESSORIES

* drawings as illustrations only

Vacuum valve system

1

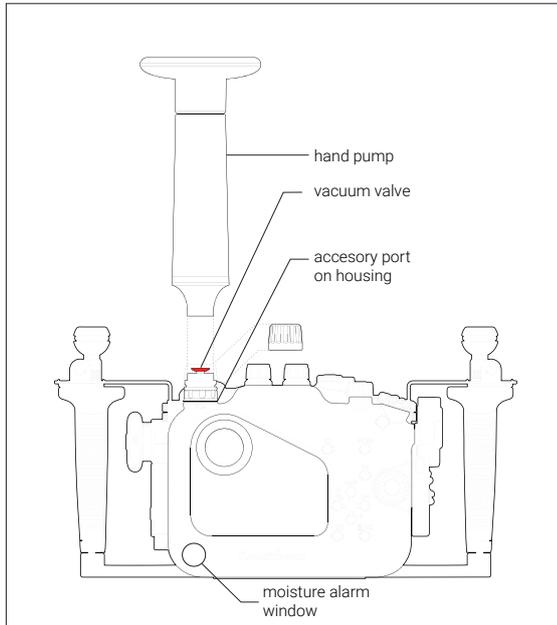


remove the plug of M14 accessory port from the housing

remove the cap from the vacuum valve

slightly lubricate the o-ring and make sure the o-ring is in place

then tighten the vacuum valve to the housing with the tool provided

2

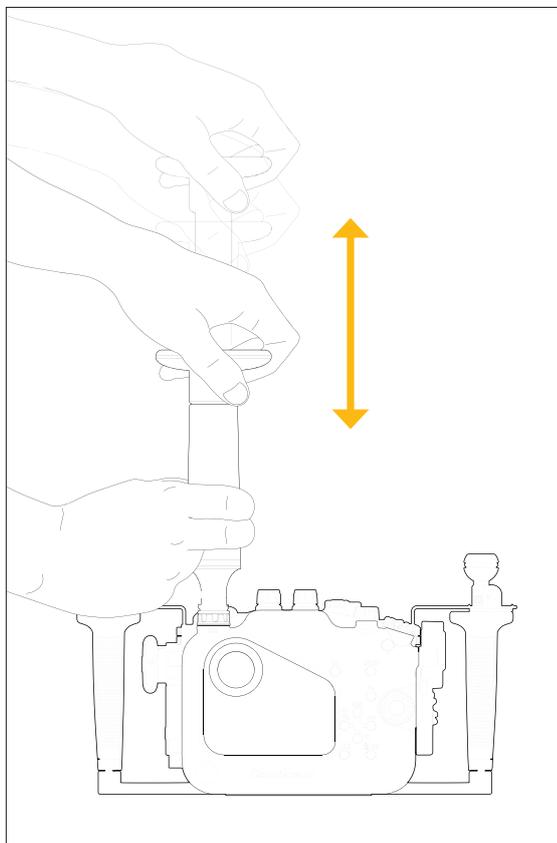

connect hand pump to the valve and pump several times until it reaches the target vacuum level

close vacuum valve cap

Moisture alarm window colour indication :

Steady Blue		device is turned on
Flashing Blue		standby mode, ready for pumping
Steady Green		target vacuum level is reached
Flashing Yellow		vacuum level is dropping
Flashing Red		vacuum is totally lost, circuit stalled until device is switched off
Alternating Blue and Red		vacuum is totally lost, circuit stalled until device is switched off
Steady Red		out of battery

** It is recommended to leave the housing for at least 20mins to ensure it is sealed. If the LED light changes from steady green light to rapidly flashing yellow light, that means there is a leakage. Please check every O-ring and then conduct the vacuum test again.*

** please contact our authorized service centers if testing fails*

CARE/STORAGE

1

Soak the housing system in fresh water after salt water usage

2

Operate all controls and buttons at least 3 times while immersed in fresh water

3

We recommend cleaning and inspecting the main O-ring each time after diving for any damage and every time the housing is opened.

4

Protect the housing with robust and shock-proof travel case during transportation. Do not travel with camera inside housing.

5

We recommend to ship the housing to our service centers for a complete overhaul after 500 dives/every 3 years.

WARRANTY

All NAUTICAM Housing Products and Viewfinders are warranted against any material and manufacturing defects for two years from the date of purchase for consumer use. NAUTICAM Optical Accessories are warranted against material and manufacturing defects for a period of one year, and HDMI cables carry a year warranty.

This warranty only applies to products purchased from authorized NAUTICAM dealers and does not extend beyond the original retail purchaser.

To return your product for service, please contact your regional authorized service center(s). Please note that this warranty only applies when the product is purchased in the territory where the service center is located.

NAUTICAM accepts no liability for any damage to and defects in the housing caused by improper use and/or poor maintenance; it is the responsibility of the owner to carefully follow the instructions in our manuals.

NAUTICAM does not hold responsibility for damage, of any nature, to any equipment used with and/or placed within our products.

NAUTICAM accepts no liability for any loss of captured images or the inability to capture images even if it is due to the malfunctioning of our products.

Unauthorized modifications and/or repairs of our products will automatically invalidate the warranty.

SPECIFICATIONS

Construction

Housing body	Hard Anodized Aluminium Alloy
Display window	Abrasion Resistant Polycarbonate

Dimensions

Width	316 mm
Height	173 mm
Depth	109 mm

Weight

In air	1.9 kg
Buoyancy in water	negative 0.3 kg (incl. camera)

Depth

Rating	100 m
--------	-------

Port Specifications

Port mount	N 100 Port System
Port accessories	1 x M24, 2 x M14, 1 x M10

Surface USB-PD Power bank

26325 USB-C Bulkhead with USB-C Connector
26326 M24-M16 Adaptor for use with 26325

Lanyard

25227 27cm Lanyard with Shackles
25412 23cm Lanyard with 2 Snap Hooks

Viewfinder

32205 Nauticam 45° Viewfinder for MIL Housing
32211 Nauticam Full Frame Straight Viewfinder 32°/ 1:1
32212 Nauticam Full Frame Straight Viewfinder 40°/ 0.8:1
32213 Nauticam Full Frame Angle Viewfinder 32°/ 1:1
32214 Nauticam Full Frame Angle Viewfinder 40°/ 0.8:1
* 32215 Viewfinder Collar for MIL Housing is Required to use with 32211/2/3/4

Buoyancy Options

72216 Ø70x200mm Carbon Fibre Aluminium Float Arm (Buoyancy 370g)
72217 Ø70x250mm Carbon Fibre Aluminium Float Arm (Buoyancy 520g)
72218 Ø70x300mm Carbon Fibre Aluminium Float Arm (Buoyancy 670g)
72219 Ø90x170mm Carbon Fibre Aluminium Float Arm (Buoyancy 450g)
72220 Ø90x220mm Carbon Fibre Aluminium Float Arm (Buoyancy 720g)
72233 Single Bayonet Holder II for Ø70 Float Arm
72234 Double Bayonet Holder II for Ø70 Float Arm
83252 Bayonet Holder for Arms
83253 Double Bayonet Holder for Arms
83254 Bayonet Lens Holder for Inon Float Arms

HDMI CONNECTION & MONITOR OPTIONS

HDMI Connectivity Required Accessories (1.4)

25033 Standard HDMI Bulkhead with M16 Thread
25046 HDMI (D-D) Cable in 200mm Length
26326 M24-M16 Adaptor for use with 26325
*instead of existing 25081

Monitor Options (1.4)

17922 Nauticam Atomos Ninja V Housing (excl. HDMI 2.0 Cable)
17923 NA-Shinobi-H Housing (includes 25046)
17926 Nauticam NA-Ultra5 Housing
25082 HDMI 1.4 Cable for Ninja V Housing in 0.75m Length
*Required for use with 17922/17926 Monitor Housing.

WET LENS COMPATIBILITY

**please refer to Nauticam port charts for more setup information.*

Wet Lens

Macro	81201 Super Macro Converter 1 (2.3x Magnification)
	81202 Super Macro Converter 2 (4x Magnification)
	81301 Compact Macro Converter 1 (CMC-1, 4.5x Magnification)
	81302 Compact Macro Converter 2 (CMC-2, 2.8X Magnification)
Macro to Wideangle	86201 Macro to Wideangle Lens 1 (MWL-1) 150 deg. FOV with Full Frame 60mm Macro Lens
	87303 EMWL Set #3 (incl. Focusing Unit #3, 150mm Relay Lens and 3 Objective Lenses)
	87203 EMWL Focusing Unit #3 (For Sony FF 90mm)
	87211 EMWL 150mm Relay Lens
	87221 EMWL 60° Objective Lens
	87222 EMWL 100° Objective Lens
	87223 EMWL 130° Objective Lens
	87226 EMWL 160° Objective Lens
Wideangle	83202 Wet Wide Lens 1B (WWL-1B) 130 deg. FOV with Compatible 28mm Lenses (incl. float collar)
	83203 Wet Wide Lens Compact (WWL-C) 130 deg. FOV with Compatible 24mm Lenses (incl. float collar)
	83205 N100 0.36x Wide Angle Conversion Port Compact (WACP-C)
	83206 N120/N100 0.36x Wide Angle Conversion Port with Integrated Float Collar and Interchangeable Port Mounting Ring

Optional Wet Lens Accessories

25101 M67 Flip Diopter Holder for M67 Macro Ports
25108 M67 Double Flip Holder for M67 Macro Ports
83214 Bayonet Mount Adaptor for SMC/CMC
86221 M67 Flip Holder for MWL-1
86222 Double Flip Holder for MWL-1
87501 Flip Holder for EMWL
87512 Shade for 130° Objective Lens
87513 Shade for 100° Objective Lens
87516 EMWL Bayonet Holder for Ø70 Float Arm
87517 EMWL Bayonet Holder for Ø90 Float Arm
87518 Strobe Mounting Brackets for EMWL Relay Lens
87519 Shade for 160° Objective Lens
81228 M67 Spacer Ring for SMC/CMC
83250 M67 to Bayonet Converter II
83251 M77 to Bayonet Converter II

FLASH TRIGGERING

Optical

Manual Flash Trigger

26302 Mini Flash Trigger for Sony
26216 Universal Optical Fiber Cable

Electrical

25056 M14 Nikonos 5-pin Bulkhead with Universal Hotshoe Connection
26326 M24-M16 Adaptor for use with 26325
<i>*instead of existing 25081</i>

Nauticam Internationl Ltd.

Rm 2203, CCT Telecom Bldg,
11 Wo Shing St,
Fo Tan,
Hong Kong

Tel. +852 - 26902711
Fax. +852 - 26909778
URL. www.nauticam.com
Gallery. www.nauticam.smugmug.com